



WARNING!

THE BATTERY IN YOUR NEW KUBERG MOTORCYCLE IS CURRENTLY DISCONNECTED AND THE BIKE WILL NOT OPERATE UNTIL YOU CONNECT THE MAIN CONNECTOR!


Please follow these steps to prepare your bike for first use.

1. Remove your KUBERG from box read and follow USER MANUAL for assembly
2. Make sure the Key switch is in OFF position and removed during the whole procedure
3. Remove Allen screws from Top body work and Dismantle top plastic body work.

Remove four Allen screws from Top body work and dismantle the plastic






Remove four Allen screws from Top body work and dismantle the plastic

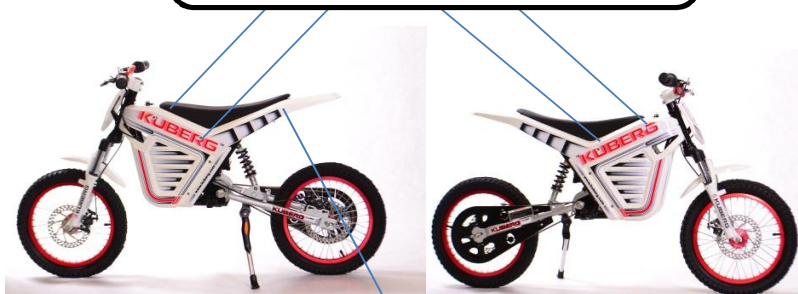

Remove Allen screw underneath the seat and release the seat by pulling it forward



3. Connect the connector firmly until it clicks in

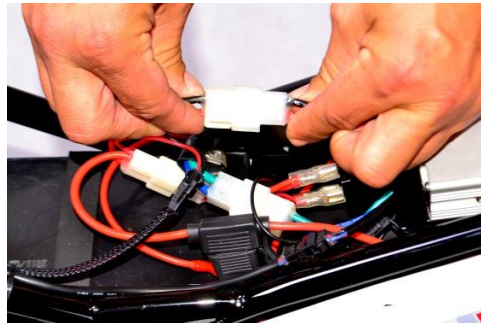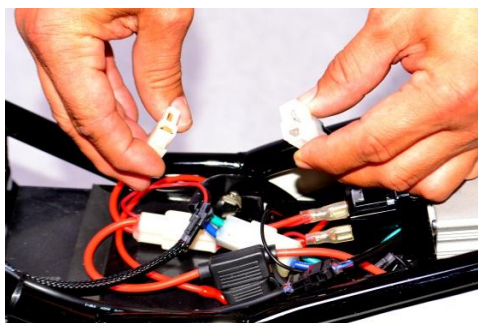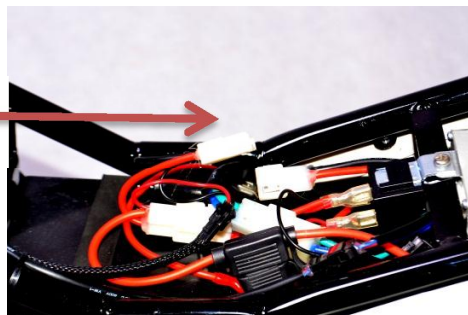

4. Assemble back the body work on your bike and tighten all screws
5. Follow USER MANUAL instructions regarding charging your batteries
6. Your bike is now ready to operate please follow all safety instructions!

THANK YOU FOR CHOSING KUBERG MOTORCYCLES. HAVE SAFE RIDING AND ENJOY LOT OF FUN!

We have manufactured this motorcycle with maximum attention to quality in the Czech Republic.

Please do not hesitate to contact us should you have any questions.

KUBERG, Inc.

2815 Mission Street

Santa Cruz, California, 95060, USA

Email: kuberg@kuberg.com, Phone: + (831) 426-1585

Facebook: <http://www.facebook.com/kubergmotorcycles>